

**Dr.Care**

www.thedrcare.com

**Looking for help?**

Contact us to get expert support.



www.thedrcare.com



support@thedrcare.com

**Dr.Care LumiView Max** | DC-SBM009

# 7" Smart Baby Monitor with Night Light

USER MANUAL



//

# Thanks for Choosing Dr.Care!

Your support means the world to us. we hope you enjoy our product as much as we did creating it.

## EXTEND YOUR WARRANTY FOR FREE

Scan or visit [www.thedrcare.com/warranty](http://www.thedrcare.com/warranty) to extend your warranty for free by registering your product.If you have any product issues,we always stand ready to help.

 [support@thedrcare.com](mailto:support@thedrcare.com)

 [www.thedrcare.com](http://www.thedrcare.com)

## FOLLOW US TO DISCOVER MORE

Find us on social media to stay connected and find new inspiration.



[dr.care\\_global](#)



[dr.care\\_global](#)



[dr.care\\_global](#)



[dr.care\\_global](#)



[dr.care\\_global](#)



[dr.care\\_global](#)

# CONTENTS

<b>1</b>	<b>IMPORTANT SAFETY INSTRUCTIONS</b>	01
----------	--------------------------------------	----

<b>2</b>	<b>KNOWING YOUR BABY MONITOR</b>	04
----------	----------------------------------	----

<b>3</b>	<b>USING YOUR BABY MONITOR</b>	07
	Using your baby monitor by monitor -----	08

<b>4</b>	<b>TROUBLESHOOTING</b>	25
----------	------------------------	----

Monitor Troubleshooting -----	25
App Troubleshooting -----	27

<b>5</b>	<b>Dr.Care CUSTOMER CARE</b>	28
----------	------------------------------	----

# IMPORTANT SAFETY INSTRUCTIONS



READ ALL CAUTIONARY MARKINGS ON THE APPLIANCE AND SAFETY INSTRUCTIONS IN THE USER MANUAL BEFORE USE.

## General Safety




**Not a Substitute for Proper Adult Supervision:** You MUST check your children's activities regularly.

**Not Intended for Use as a Medical Camera:** This appliance should not replace adult supervision.

**Not a Toy:** Do not allow children to play with this appliance.

**Risk of Suffocation:** Keep all packaging materials out of reach of children.

## Location Safety

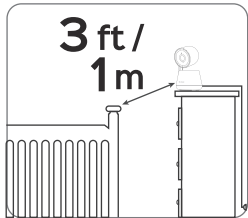

### Strangulation Hazard:

Children can be entangled in cords. Keep the appliance, adapter and power cords out of the reach of children at all times, at least 3 feet / 1 meter away.

### Danger from Power Cords:

To avoid possible danger from power cords, the cords should be secured and never be hung on or near the crib or playpen. Do not place in the crib, bed or playpen.

### Keep Away From Heat:

Do not install near any heat sources such as radiators, heat registers and stoves.

### Water and Moisture:

Do not use the appliance near water, including near a bathtub, sink, laundry machine, wet basement, etc.

## Electricity Safety

- Only use the AC adapters provided.
- Do not insert anything into upgrade pinholes.
- Do not block any ventilation openings.
- Unplug the appliance during lightning storms.
- Only use attachments and accessories provided.
- Unplug the appliance when unused for long periods of time.

## HOUSEHOLD USE ONLY — READ AND SAVE THESE INSTRUCTIONS

### FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: this device may not cause harmful interference, and this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### FCC 20cm Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

# SPECIFICATIONS

## General System

Connectivity	2.4GHz WIFI
RF Frequency	2.412-2.472GHz
Type of Modulation	OFDM
Selectable Camera Channels	2
Transmission Distance	1279ft / 390m

## Monitor

Input Voltage	DC5V
Operating Voltage	DC5V - 1.5A
Battery	6000mAh
Zoom	2X & 4X

## Camera

Input Voltage	DC5V
Operating Voltage	DC5V - 1.5A
Night Vision	Black and white
Pan &Tilt	135 degrees vertical, 300 degrees horizontal

## Gentle Reminder

Check the appliance regularly and refer to TROUBLESHOOTING or contact our customer support if it shows any of the following signs:

 
 

- Power cord or plug is damaged.
- Poor reception or excessive noise.

# KNOWING YOUR BABY MONITOR

# 2


## Package Contents

\*Actual contents may vary depending on your purchase.

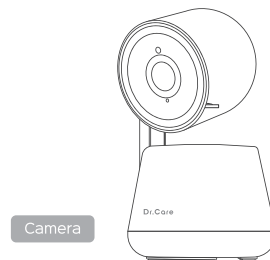


## Product Diagram

### Camera

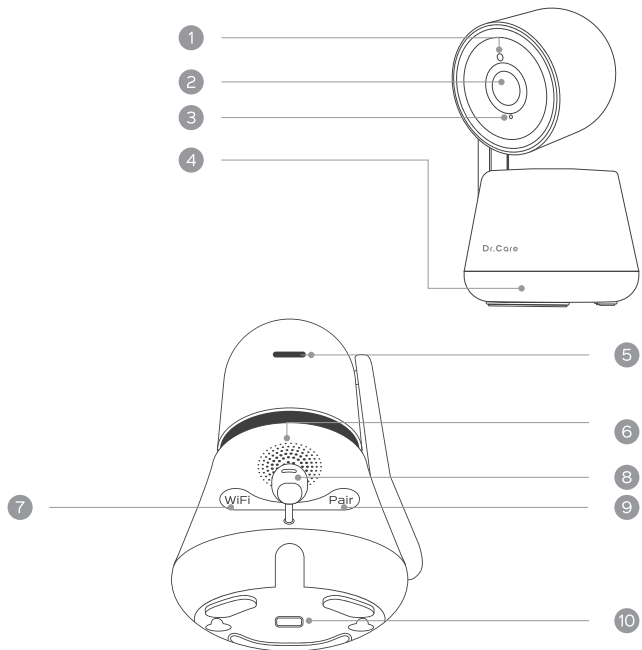

1 Light Sensor	5 TF Card Jack	9 Monitor Pair Button
2 Lens	6 Speaker	10 USB Power Input Port
3 Microphone	7 Wi-Fi Pair Button	
4 Light	8 Temperature Sensor	

### Baby Monitor

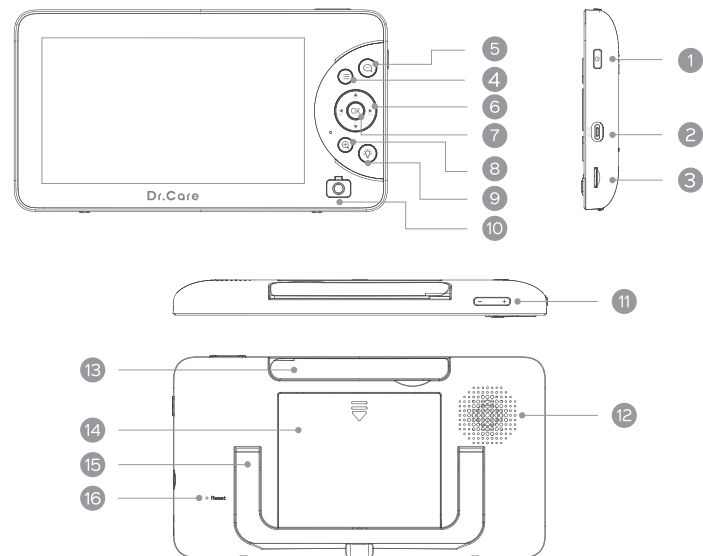


1 Power/Sleep Button	7 OK Button	13 Antenna
2 Power Jack	8 Zoom Button	14 Battery Compartment
3 TF Card Jack	9 Light Button	15 Back Stand
4 Menu/Back Button	10 Snapshot	16 Reset Hole
5 Talk Button	11 Volume Indicator	
6 Arrow Key	12 Speaker	

# USING YOUR BABY MONITOR

## Getting Started

### 1. Plugging in the Camera


Connect the camera to a 5V DC power supply using the included AC adapter. The camera will power on automatically. After approximately 15 seconds, the power-up process will be complete.

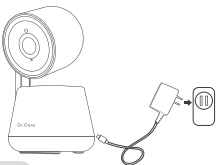

Place the camera and power cord out of reach of children. Camera is not battery powered. Keep plugged in when in use.

### 2. Charging the Monitor

It takes around 6 hours to fully charge. The charging indicator will turn on while charging and off when fully charged.

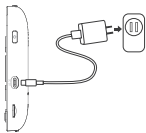

### 3. Pairing the Camera with the Monitor

By default, the camera has been paired with the monitor when manufactured. If the camera is disconnected, please refer to page 13.



Keep camera and monitor within a distance of 12-40 in (30-100cm) when pairing. Note that microphone feedback might occur when they are close to each other.

### 4. Positioning the Camera

Keep the camera 3-16 ft (1-5m) away from your baby's crib, playpen and baby bed for best viewing and safety reasons.

### 5. Wall Mounting the Camera (Optional)

Select a spot to mount the camera, ideally 5-8 ft high, keeping it beyond the reach of children. Install the included screw into the wall and mount the camera onto the screw.




Do not release the camera until you're sure it is firmly mounted.

## Function & Operations







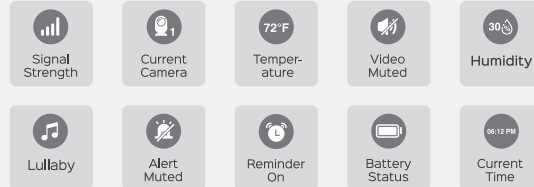

### 1. Interface Overview










#### Status Bar



## Menu Bar

 <b>Volume Settings</b>	 <b>Monitor Volume</b> Adjust video volume
	 <b>Talk Volume</b> Adjust 2-way talk back volume
	 <b>Lullaby</b> Play lullaby
	 <b>Lullaby Volume</b> Adjust lullaby volume
	 <b>Alert Volume</b> Adjust alert/reminder volume
 <b>Brightness Settings</b>	 <b>Light Timer</b> Set night light auto-off timer
	 <b>Light Mode</b> Adjust light brightness and modes
	 <b>Light Color</b> Adjust light brightness and modes
	 <b>Brightness</b> Adjust brightness level
	 <b>Screen Timeout</b> Change screen timeout to 1 min, 3 mins, 5 mins, or never
 <b>Camera Settings</b>	 <b>Add</b> Add camera
	 <b>Cam View</b> Select camera view to display
	 <b>Delete</b> Remove camera pairing
 <b>VOX Settings</b>	 <b>VOX On</b> Turn on VOX
	 <b>VOX Off</b> Turn off VOX
 <b>Reminder Settings</b>	 <b>Alarm Clock</b> Set reminder at a specific time
	 <b>Feeding Reminder</b> Create a repeating reminder (2 hrs, 4 hrs, 6 hrs, or OFF)
 <b>Safety Settings</b>	 <b>Safe Protection</b> Forbid app access to the camera
	 <b>Privacy Mode</b> Sleep the camera
	 <b>Crying Detection</b> Detect crying and alert you
	 <b>Action Tracking</b> Ensure the baby is in your sight
	 <b>Motion Detection</b> Detect motion and alert you


## Other Settings

 <b>Device Info</b> Device Information
 <b>TF Card</b> TF Card information
 <b>Languages</b> Select Language
 <b>Times</b> Set the date and time on the monitor
 <b>Temperature</b> Select temperature unit (°C/°F) and configure alert threshold settings
 <b>Reset</b> Reset to factory settings
 <b>Support</b>



## 2. Volume Settings


Press  , select through  →  **Monitor Volume** /  **Talk Volume** /  **Lullaby Volume** /

 **Alert Volume** , and press  /  to adjust volume.


Press and hold the  for 3 seconds to enter quick adjustment mode. You can then use the arrow keys to adjust the volume and brightness.





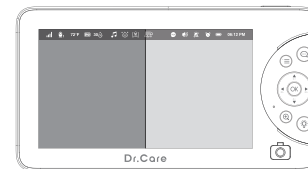


If you have paired two cameras, press  /  to select the corresponding camera. When your selection box is on the left, you are controlling the left camera, and the Talk Volume, Lullaby, etc., will affect the left camera.

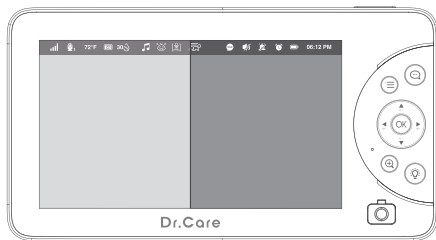


When your green selection box is on the right, you are controlling the right camera, and the Talk Volume, Lullaby, etc., will affect the right camera.




### 3. Lullaby

Press , select through  1, and press  /  to select lullabies. Press  to choose random play, loop play, or turn off.

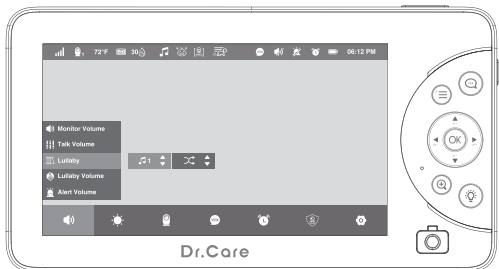



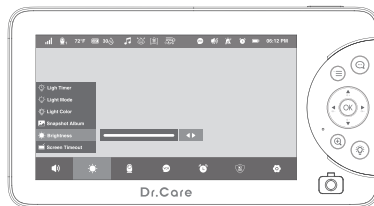


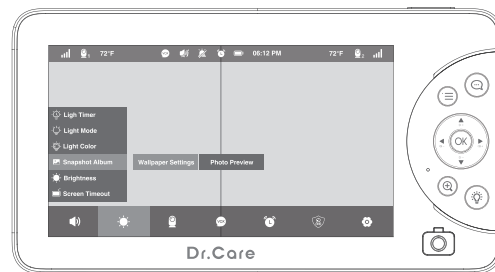
### 4. Brightness Settings

Press , select through  →  Brightness, and press  /  to adjust degree →  to set the desired brightness level.




### 5. Snapshot Album


Press , Select  →  Snapshot Album → Use  /  to choose Wallpaper Settings or Photo Preview.




Select **Wallpaper Settings** → Press **OK** to view wallpaper thumbnails. Use **←** / **→** / **↑** / **↓** to select a photo → Press **OK** to confirm → Use **←** / **→** to choose between **Set as Wallpaper** , **Cancel Wallpaper Setting** , Or **Change Wallpaper** → Press **OK** to confirm.

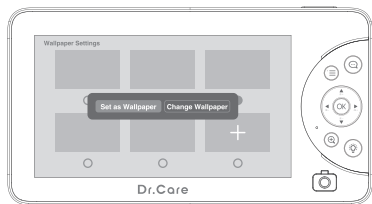


If selecting **Change Wallpaper** : Press **OK** to enter **Album Preview** (shows Snapshot photos). Here, you'll see thumbnails of Snapshot - taken photos. In **Album Preview** thumbnail view, press the **☰** to filter by camera/date/month/year → Use **↑** / **↓** to navigate filters and locate images faster.

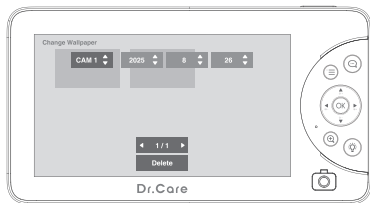

If the desired image is not in the initial wallpaper thumbnails:  
Select the last thumbnail (marked with a "+" symbol) → Press **OK** to go to **Album Preview** . Repeat the photo selection steps (filters work as described above) → Then choose whether to set it as wallpaper.

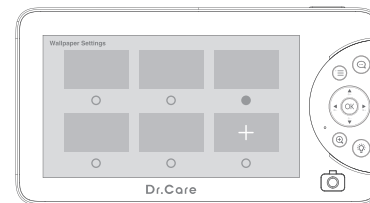


Select **Photo Preview** → Press **OK** to show Snapshot photo thumbnails → Use **←** / **→** / **↑** / **↓** to select a photo → Press **OK** to view it full-size. Repeat the photo selection steps (filters work as described above) to navigate filters and locate images faster.

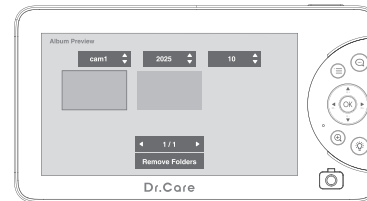




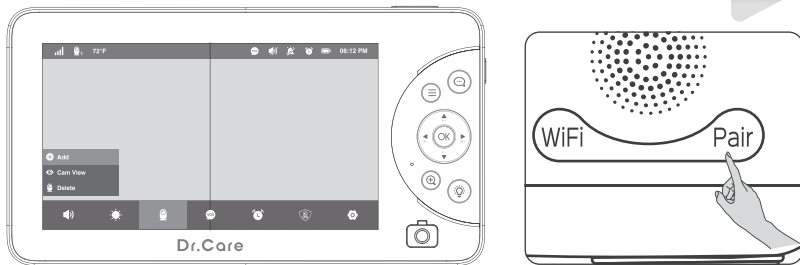
## 6. Screen Timeout

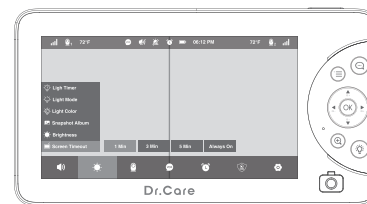Press **☰** , select through **☀** → **Screen Timeout** , and press **←** / **→** to select duration → **OK** to set the desired time for the screen to turn off automatically.






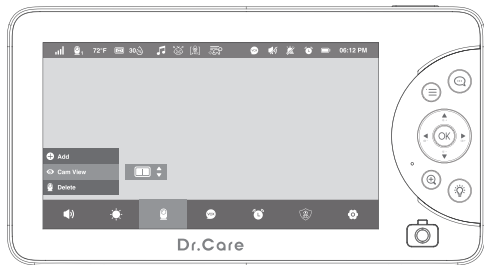
## 7. Add a Camera




Press , select through  → , press the Pair button on the camera near the antenna and listen for the prompt tone, then the camera will pair with the monitor automatically.




## 8. Split View and Auto Switch View

Press , select through , and select  to view two cameras in split-screen mode.  
In split-screen mode, the audio will switch between cameras every 15 seconds.




Press , select through , and select  to view two cameras in split-screen mode.


Once set, the screen and audio will switch between connected cameras every 15 seconds.

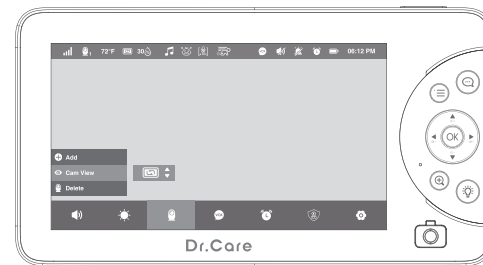

## 9. Delete a Camera

Press , select through  →  and select the camera number 1/2 to view.

- At least one camera should stay connected.
  - The current camera number will appear at the top of the screen.
-  If you want to remove the remaining camera, press the PAIR button three times to disconnect it, and then you can delete the remaining camera.

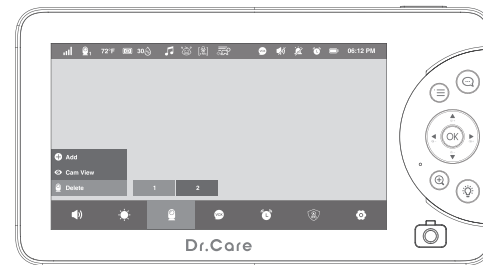

## 10. VOX (Voice Activated Alert)



1) Press , select through  → .


2) choose a sensitivity level. The higher the VOX sensitivity level, the more sensitive the camera is in detecting sounds for transmitting to the monitor.


 In VOX mode, the screen will stop broadcasting sounds from the camera side until the audio detected is above the alert level.



## 11. Nursing Reminder

Press , select through  Alarm Clock to select the group, you can set up to four alarms to set a specific time for the monitor to alert you for nursing.


You can also select through  Feeding reminder, and select 2 hours, 4 hours, or 6 hours to create a repeating reminder.


 The reminder will sound for 30 seconds and again after 1 minute if no action is taken, but will shut off automatically if none is taken after three times.



## 12. Safe Protection




Press the  button, then select  to allow the camera to access the app.

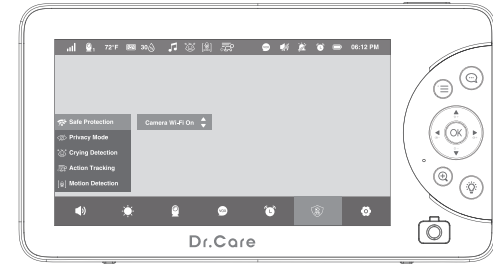
Select  to disconnect the camera's signal from the app.



Note: App can only access camera when wifi is ON.

## 13. Privacy Mode


Press the , then select  to set the camera to privacy mode, stopping video and audio transmission. Select  to resume normal camera operation.

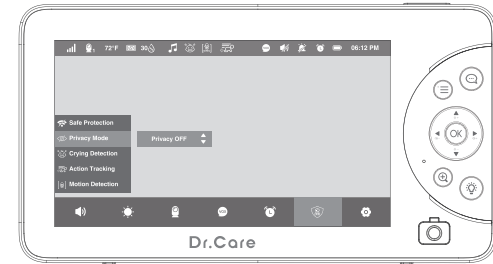




## 14. Detection

### 1) Crying Detection

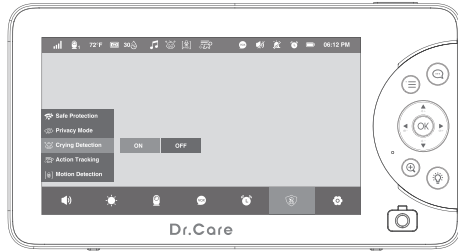- Press , select through  →  **Crying Detection** to turn on/off detection. Monitor will alert you when detect the baby's cry.




### 2) Motion Detection




- Press , select through  →  **Motion Detection** to select **High** / **Middle** / **Low** / **OFF** sensitivity levels to monitor your baby's movements.


For example, select high sensitivity while your baby is sleeping to receive alerts for any movement. For an awake and playing baby, choose medium or low sensitivity.

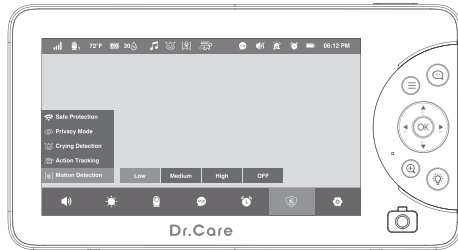Note: Movements such as door swings or curtains blown by the wind, which cause changes in the camera's view, may also trigger motion detection.







### 3) Action Tracking

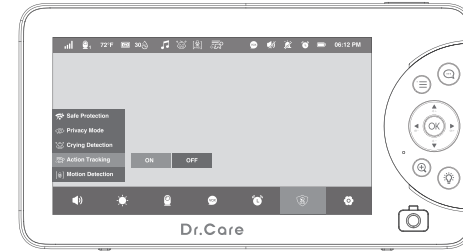
- Press , select through  →  **Action Tracking** to turn ON/OFF camera tracking. The camera continuously tracks your baby, ensuring they remain in your sight. Note: When Action Tracking is enabled, the camera will rotate to follow facial movements—this is normal behavior and there is no need to worry.



## 15. Talkback

 
Push  to talk and release to listen.

- **In split-screen mode:** the talkback function is activated on the left camera by default. You can press  /  → **OK** to select one camera to talk to.
- When the video volume is set low, you might not be able to hear from the camera side.
- When  is pressed, the sound from the camera side will not be heard.

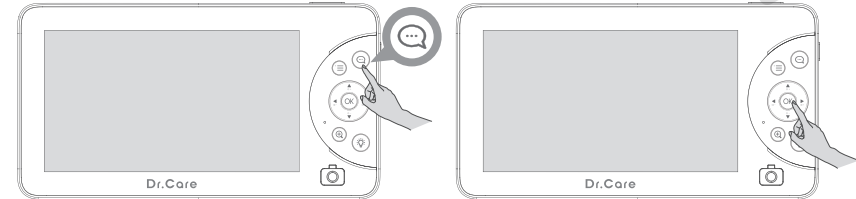


## 16. Screen Off Mode

Press briefly to enter Screen Off Mode. In this mode, the monitor will continue to receive sounds from the camera. Press any button to wake up.

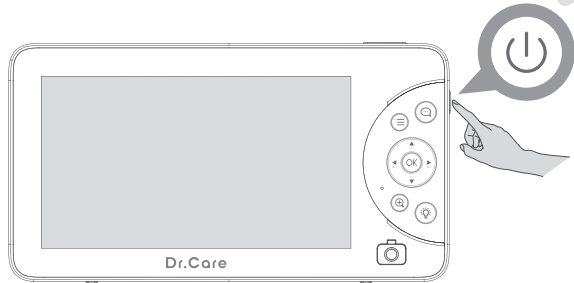





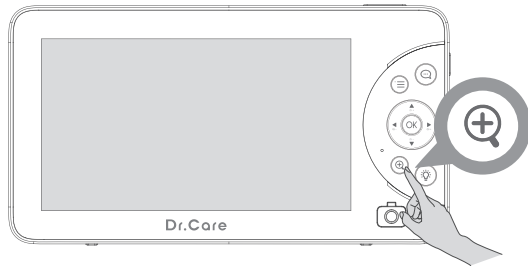



## 17. Zoom In & Zoom Out

When viewing a camera, press  to magnify the screen at 2x or 4x.


 
## 18. Pan & Tilt

Press  /  to select the camera, and press  to enter camera control, press  /  /  /  to view from different angles, 135 degrees vertically and 300 degrees horizontally.

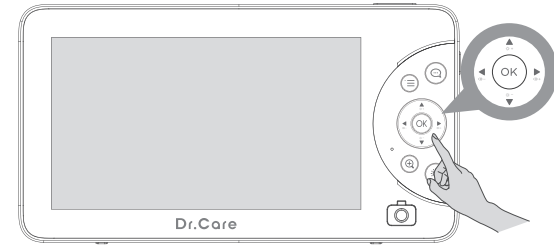


## 19. Night Vision

The night vision is automatically activated in a dim environment. Infrared LEDs attached on the front of the camera allow you to see the baby in a dark room.





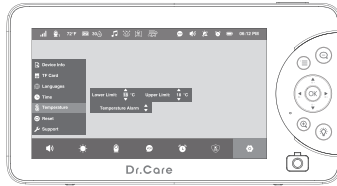


## 20. Temperature Alert


Press , select through  →  Temperature, press  /  to select °F/C / Default value / High-temperature alarm / Low-temperature alarm → press  and press  /  to set.



## 21. Other Settings


Press , and select  to enter other settings.

- 1)  Device Info View device information
- 2)  TF card Only FAT32 memory cards are supported
- 3)  Languages Select device language
- 4)  Time Set the time on the monitor manually or sync it with the phone's time
- 5)  Temperature Select temperature
- 6)  Reset Reset to factory settings
- 7)  Support View support contacts

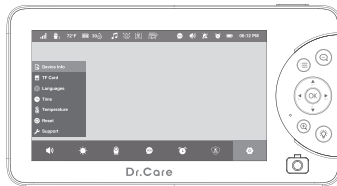


## 22. Reset Hole

If the monitor screen does not respond when you press any buttons, you can use a pin to press the reset hole on the back of the monitor to restart it.

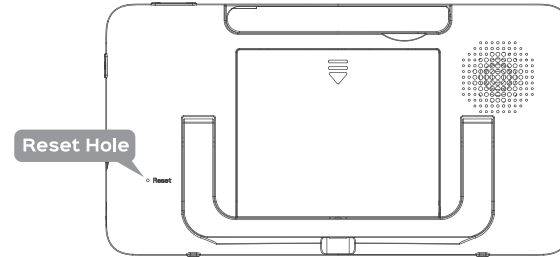

## 23. Battery Access

Accessing the battery compartment for maintenance.

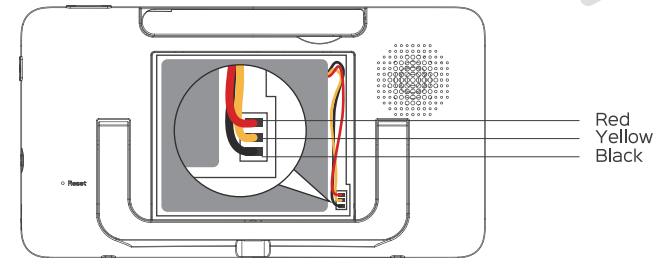

# TROUBLESHOOTING

## 4




### Why won't my baby monitor turn on?

- Make sure the monitor is turned on and there is still power left.
  - Charge with the included power cable only.
  - Check if the charging indicator is on.
- If not, please switch to another power outlet or change the adapter.






### Is a WiFi connection required to set up and use?

- This non-WiFi appliance does not need an internet connection for setup.
- The baby monitor and camera use 2.4GHz radio frequency for transmission.

### Why won't my baby monitor connect to the camera?

- Make sure the camera is securely plugged in. Check if the plug and power cord are damaged.
- Make sure the monitor is close to the camera when pairing.
- Check if there are large metallic objects like doors, refrigerators, mirrors that might block signal transmission.
- Check if there are existing 2.4GHz equipment like WiFi networks and microwave ovens that might interfere with signal transmission.
- Press the Menu Button, select through  →  →  and press the PAIR button on the camera, then the camera will pair with the monitor automatically.





### Why does the monitor screen keep switching off when I'm using it?

- Press the Menu Button, select through  →  and press  /  →  to set the desired time for the screen to turn off automatically.
  - You may have the VOX (Voice Activated Alert) mode on so that the screen will only come on when the sound is above the alert level.
- You can switch this feature off within the menu.

### Why is the screen black when I view a camera?

- Make sure the camera is in range and securely plugged in.
- Check if the plug and power cord are damaged.
- Adjust the monitor antenna to improve the signal strength.

### Why is there no sound from the monitor?

- Check if the video volume is too low. Press the Menu Button, select through  →  , and press  →  to set the desired volume level.
- Check if VoX mode is turned on. Note that in VOX mode the screen will stop broadcasting sounds from the camera side until the audio detected is above the alert level.

### How should I clean and maintain my monitor and accessories?

- Never immerse in water or other liquids. They aren't waterproof.
- Clean with a dry cloth only. Exercise caution when cleaning the camera lens.
- Clean the temperature sensor on the camera with a dry cotton swab on a regular basis.

### Why is the temperature shown on the monitor not accurate?

- The temperature sensor is on the camera. Please make sure there is enough air circulation around the sensor.
- Do not place the camera near heat sources, including heaters, air-conditioning vents, and lamps.
- The air at the ceiling is warmer than the air at the floor. Place the camera at a relatively low height to read the temperature more accurately.
- Power the monitor and camera off and on again, reset the monitor to factory settings, and pair the camera with the monitor again.





### Why did the monitor video suddenly turn black and white?

- Night vision may have become activated. Turn on the room lights and night vision will turn off automatically.




### Why is the screen a bit choppy?

- Make sure the camera is in range.
- Adjust the monitor antenna to improve the signal strength.

### My baby monitor makes a noise.

- Microphone feedback might occur when the monitor is too close to the camera. Keep them away from each other.
- Volume is too high. Press the Menu Button, select through  → , and press  →  to lower the volume.
- The camera is not in range. Please keep the distance within 30 feet / 10 meters.

## Troubleshooting of app

If have any problem with Baby monitor, please press  to search the problem you meet, if not found, tap  My feedback and create a new feedback or tap  to contact us, we will reply you as fast as possible.

## DR.CARE CUSTOMER CARE

### Default 12-Month Warranty

This appliance is covered by Dr.Care warranty for 12 months from the date of its original purchase.

### Extend Your Warranty

Extend your warranty by registering your new appliance on our website [www.thedrcare.com/warranty](http://www.thedrcare.com/warranty).

### The warranty will not apply in cases of:

- Accident, misuse, or repairs performed by unauthorized personnel.
- Any unit that has been tampered with or used for commercial purposes.
- Normal wear and tear of wearable parts.
- Use of force, damage caused by external influences.
- Damage caused by non-observance of the User Manual, e.g. connection to an unsuitable mains supply or noncompliance with the instructions.
- Partially or completely dismantled appliances.
- Defects caused by or resulting from damages from shipping or from repairs, service, or alteration to the product or any of its parts that have been performed by a repair person not authorized by Dr.Care.

We can only provide after-sales service for products that are sold by Dr.Care or Dr.Care authorized retailers and distributors. If you have purchased the appliance from a different place, please contact your seller for return and warranty issues.

## We're Here to Help!

 [support@thedrcare.com](mailto:support@thedrcare.com)

 [www.thedrcare.com](http://www.thedrcare.com)

 Carestream Technologies Limited