

Looking for help?
Contact us to get expert support.



www.thedrcare.com



support@thedrcare.com

Dr.Care LumiView | DC-SBM003

5" Smart Baby Monitor with Night Light

USER MANUAL



// Thanks for Choosing Dr.Care!

Your support means the world to us. we hope you enjoy our product as much as we did creating it.

EXTEND YOUR WARRANTY FOR FREE

Scan or visit www.thedrcare.com/warranty to extend your warranty for free by registering your product.If you have any product issues,we always stand ready to help.



support@thedrcare.com



www.thedrcare.com

FOLLOW US TO DISCOVER MORE

Find us on social media to stay connected and find new inspiration.



dr.care_global



dr.care_global



dr.care_global



dr.care_global



dr.care_global



dr.care_global

CONTENTS

4

1

IMPORTANT SAFETY INSTRUCTIONS

01

2

KNOWING YOUR BABY MONITOR

04

3

USING YOUR BABY MONITOR

07

Using your baby monitor by monitor ---- 08

More Language Versions

25

Deutsch ----- 25

Français ----- 49

Italiano ----- 73

Español ----- 97

IMPORTANT SAFETY INSTRUCTIONS

READ ALL CAUTIONARY MARKINGS ON THE APPLIANCE AND SAFETY INSTRUCTIONS IN THE USER MANUAL BEFORE USE.

General Safety



 
Not a Substitute for Proper Adult Supervision: You MUST check your children's activities regularly.

Not Intended for Use as a Medical Camera: This appliance should not replace adult supervision.

Not a Toy: Do not allow children to play with this appliance.

Risk of Suffocation: Keep all packaging materials out of reach of children.

Location Safety

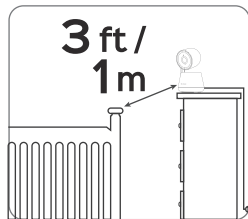

Strangulation Hazard:

Children can be entangled in cords. Keep the appliance, adapter and power cords out of the reach of children at all times, at least 3 feet / 1 meter away.

Danger from Power Cords:

To avoid possible danger from power cords, the cords should be secured and never be hung on or near the crib or playpen. Do not place in the crib, bed or playpen.

Keep Away From Heat:

Do not install near any heat sources such as radiators, heat registers and stoves.

Water and Moisture:

Do not use the appliance near water, including near a bathtub, sink, laundry machine, wet basement, etc.

Electricity Safety

- Only use the AC adapters provided.
- Do not insert anything into upgrade pinholes.
- Do not block any ventilation openings.
- Unplug the appliance during lightning storms.
- Only use attachments and accessories provided.
- Unplug the appliance when unused for long periods of time.

HOUSEHOLD USE ONLY READ AND SAVE THESE INSTRUCTIONS

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: this device may not cause harmful interference, and this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC 20cm Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

SPECIFICATIONS

General System

Connectivity	2.4GHz WIFI
RF Frequency	2.412-2.472GHz
Type of Modulation	OFDM
Selectable Camera Channels	2
Transmission Distance	1279ft / 390m

Monitor

Input Voltage	DC5V
Operating Voltage	DC5V - 1.5A
Battery	5000mAh
Zoom	2X & 4X

Camera

Input Voltage	DC5V
Operating Voltage	DC5V - 1.5A
Night Vision	Black and white
Pan &Tilt	135 degrees vertical, 300 degrees horizontal

Gentle Reminder

Check the appliance regularly and refer to TROUBLESHOOTING or contact our customer support if it shows any of the following signs:

 
- Power cord or plug is damaged.
- Poor reception or excessive noise.

KNOWING YOUR BABY MONITOR


2

Package Contents


*Actual contents may vary depending on your purchase.

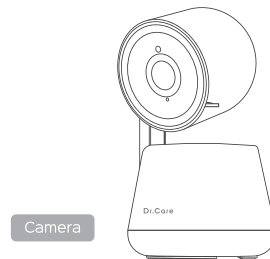


Camera

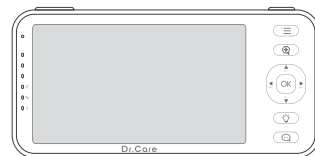 

Baby Monitor

 

 USB Charger and Charging Cable
(For Camera)



USB Charger and Charging Cable
(For Monitor)



 
User Manual



Quick Start Guide


Product Diagram

Camera

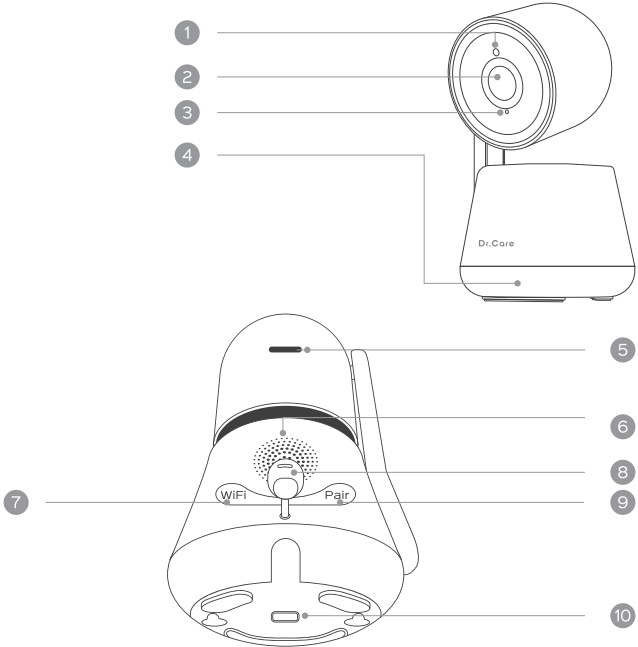

1 Lens	5 TF Card Jack	9 Wi-Fi Pair Button
2 Light Sensor	6 Speaker	10 USB Power Input Port
3 Microphone	7 Wi-Fi Pair Button	
4 Light	8 Temperature Sensor	

 Baby Monitor

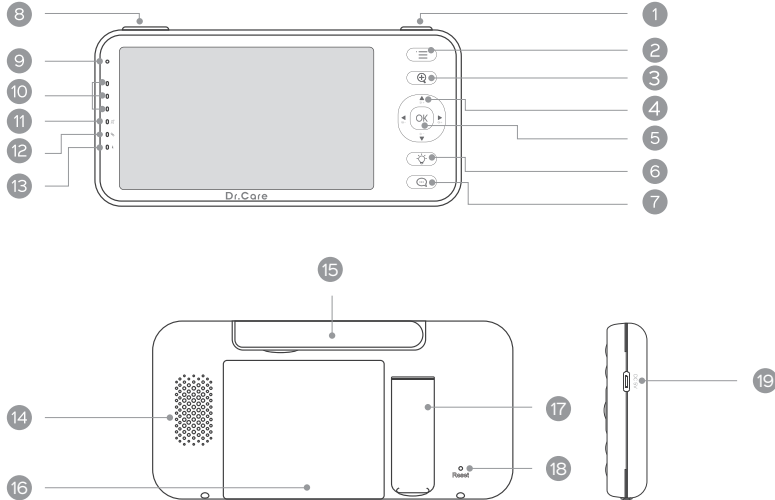

1 Power/Sleep Button	8 Volume Indicator	15 Antenna
2 Menu/Back Button	9 Microphone	16 Battery Compartment
3 Zoom Button	10 Volume indicator light	17 Back Stand
4 Arrow Key	11 Mute indicator light	18 Reset Hole
5 OK Button	12 Pairing indicator light	19 Power Jack
6 Light Button	13 Charging indicator light	
7 Talk Button	14 Speaker	

USING YOUR BABY MONITOR

 
Getting Started

1. Plugging in the Camera

Connect the camera to a 5V DC power supply using the included AC adapter. The camera will power on automatically. After approximately 15 seconds, the power-up process will be complete.




Place the camera and power cord out of reach of children. Camera is not battery powered. Keep plugged in when in use.

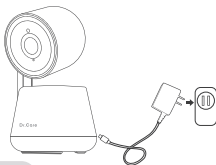

2. Charging the Monitor

 It takes around 6 hours to fully charge. The charging indicator will turn on while charging and off when fully charged.

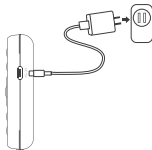

3. Pairing the Camera with the Monitor

By default, the camera has been paired with the monitor when manufactured. If the camera is disconnected, please refer to page 13.



Keep camera and monitor within a distance of 12-40 in (30-100cm) when pairing. Note that microphone feedback might occur when they are close to each other.

4. Positioning the Camera

Keep the camera 3-16 ft (1-5m) away from your baby's crib, playpen and baby bed for best viewing and safety reasons.

5. Wall Mounting the Camera (Optional)

Select a spot to mount the camera, ideally 5-8 ft high, keeping it beyond the reach of children. Install the included screw into the wall and mount the camera onto the screw.



Do not release the camera until you're sure it is firmly mounted.

 
3

Function & Operations

1. Interface Overview



Status Bar

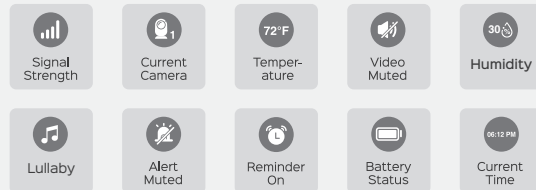

Menu Bar



Volume Settings

- Monitor Volume** Adjust video volume
- Talk Volume** Adjust 2-way talk back volume
- Lullaby** Play lullaby
- Lullaby Volume** Adjust lullaby volume
- Alert Volume** Adjust alert/reminder volume



Brightness Settings

- Light Timer** Set night light auto-off timer
- Light Mode** Adjust light brightness and modes
- Light Color** Adjust light brightness and modes
- Brightness** Adjust brightness level
- Screen Timeout** Change screen timeout to 1 min, 3 mins, 5 mins, or never



Camera Settings

- Add** Add camera
- Cam View** Select camera view to display
- Delete** Remove camera pairing



VOX Settings

- VOX On** Turn on VOX
- VOX Off** Turn off VOX



Reminder Settings

- Alarm Clock** Set reminder at a specific time
- Feeding Reminder** Create a repeating reminder (2 hrs, 4 hrs, 6 hrs, or OFF)



Safety Settings

- Safe Protection** Forbid app access to the camera
- Privacy Mode** Sleep the camera
- Crying Detection** Detect crying and alert you
- Action Tracking** Ensure the baby is in your sight
- Motion Detection** Detect motion and alert you



Other Settings

- Device Info** Device Information
- TF Card** TF Card information
- Languages** Select Language
- Times** Set the date and time on the monitor
- Temperature** Select temperature unit (°C/°F) and configure alert threshold settings
- Reset** Reset to factory settings
- Support**

2. Volume Settings

Press , select through → / / / , and press / to adjust volume.

Press and hold the for 3 seconds to enter quick adjustment mode. You can then use the arrow keys to adjust the volume and brightness.



If you have paired two cameras, press / to select the corresponding camera. When your selection box is on the left, you are controlling the left camera, and the Talk Volume, Lullaby, etc., will affect the left camera.



When your green selection box is on the right, you are controlling the right camera, and the Talk Volume, Lullaby, etc., will affect the right camera.



 
3. Lullaby

Press , select through , and press  /  to select lullabies. Press  to choose random play, loop play, or turn off.




4. Brightness Settings

Press , select through  → , and press  /  to adjust degree →  to set the desired brightness level.

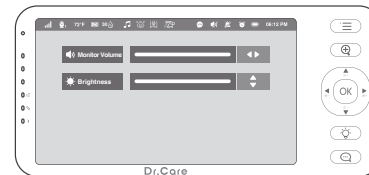



5. Screen Timeout

 Press , select through  → , and press  /  to select duration →  to set the desired time for the screen to turn off automatically.

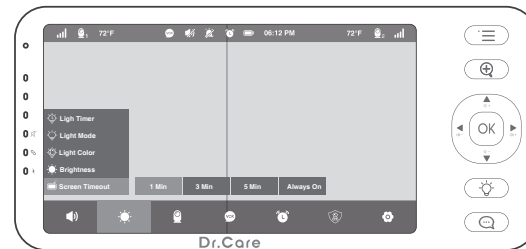

6. Add a Camera

  Press , select through  →  Add, press the Pair button on the camera near the antenna and listen for the prompt tone, then the camera will pair with the monitor automatically.

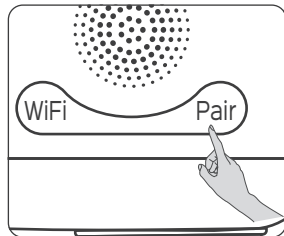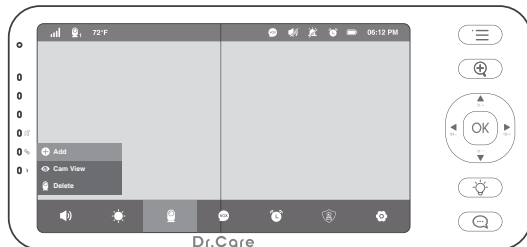


7. Split View and Auto Switch View

Press , select through , and select  to view two cameras in split-screen mode.
In split-screen mode, the audio will switch between cameras every 15 seconds.



Press , select through , and select  to view two cameras in split-screen mode.

 Once set, the screen and audio will switch between connected cameras every 15 seconds.

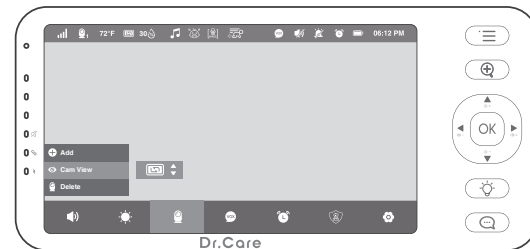


8. Delete a Camera

Press , select through  →  Delete and select the camera number 1/2 to view.



 - At least one camera should stay connected.
 - The current camera number will appear at the top of the screen.
- If you want to remove the remaining camera, press the PAIR button three times to disconnect it, and then you can delete the remaining camera.

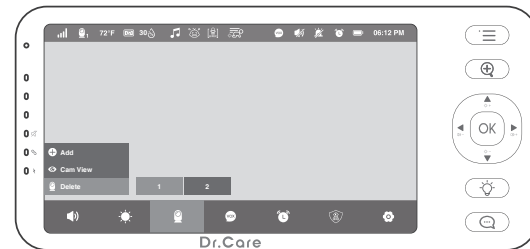

9. VOX (Voice Activated Alert)

1) Press , select through  → .

2) choose a sensitivity level. The higher the VOX sensitivity level, the more sensitive the camera is in detecting sounds for transmitting to the monitor.

 In VOX mode, the screen will stop broadcasting sounds from the camera side until the audio detected is above the alert level.



10. Nursing Reminder

 
Press , select through  Alarm Clock to select the group, you can set up to four alarms to set a specific time for the monitor to alert you for nursing.

You can also select through , and select 2 hours, 4 hours, or 6 hours to create a repeating reminder.


 The reminder will sound for 30 seconds and again after 1 minute if no action is taken, but will shut off automatically if none is taken after three times.



11. Safe Protection

Press the , then select  to allow the camera to access the app.

 
Select  to disconnect the camera's signal from the app.

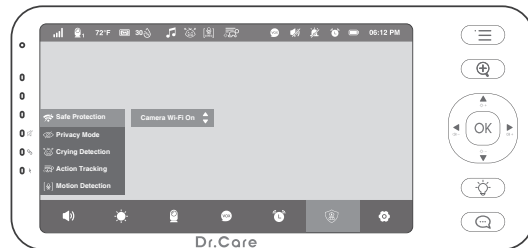

Note: App can only access camera when wifi is ON.

12. Privacy Mode

 
Press the , then select  to set the camera to sleep mode, stopping video and audio transmission. Select  to resume normal camera operation.

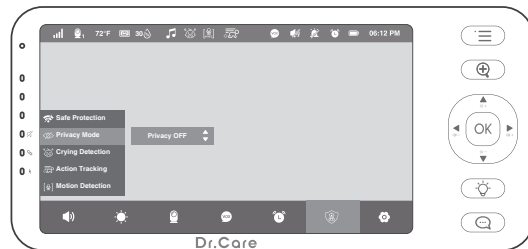

13. Detection

1) Crying Detection

 - Press , select through  →  **Crying Detection** to turn on/off detection. Monitor will alert you when detect the baby's cry.

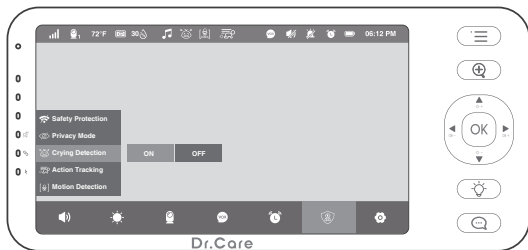


2) Motion Detection

- Press , select through  →  **Motion Detection** to select **High** / **Middle** / **Low** / **OFF** sensitivity levels to monitor your baby's movements.

For example, select high sensitivity while your baby is sleeping to receive alerts for any movement. For an awake and playing baby, choose medium or low sensitivity.

 Note: Movements such as door swings or curtains blown by the wind, which cause changes in the camera's view, may also trigger motion detection.

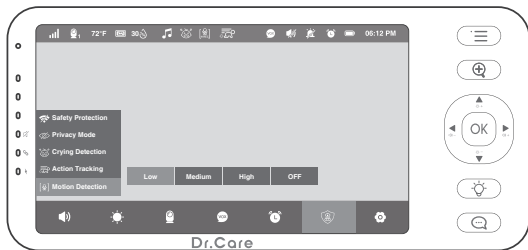


3) Action Tracking

- Press , select through  →  **Action Tracking** to turn ON/OFF camera tracking.

The camera continuously tracks your baby, ensuring they remain in your sight.

 
Note: When Action Tracking is enabled, the camera will rotate to follow facial movements—this is normal behavior and there is no need to worry.

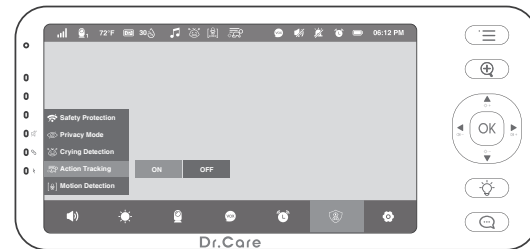

14. Talkback


Push  to talk and release to listen.

 - In **split-screen mode**: the talkback function is activated on the left camera by default. You can press  /  →  to select one camera to talk to.
- When the video volume is set low, you might not be able to hear from the camera side.
- When  is pressed, the sound from the camera side will not be heard.

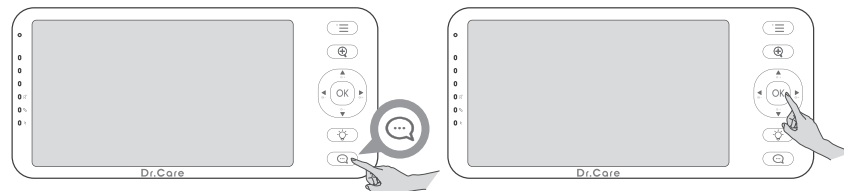


15. Screen Off Mode

 Press briefly to enter Screen Off Mode. In this mode, the monitor will continue to receive sounds from the camera. Press any button to wake up.

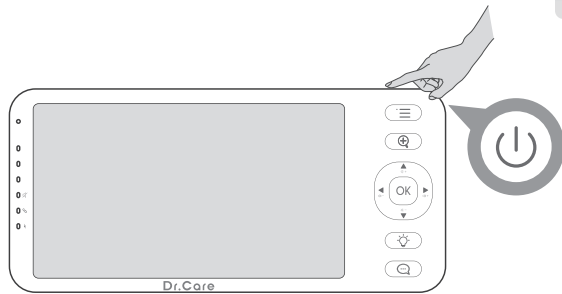


17. Pan & Tilt

 Press / to select the camera, and press to enter camera control, press / / / to view from different angles, 135 degrees vertically and 300 degrees horizontally.

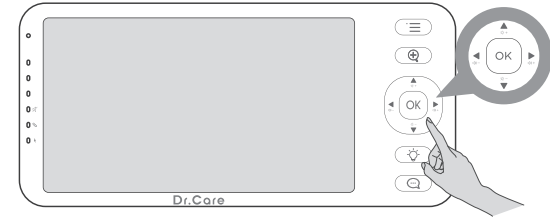

16. Zoom In & Zoom Out

 When viewing a camera, press to magnify the screen at 2x or 4x.

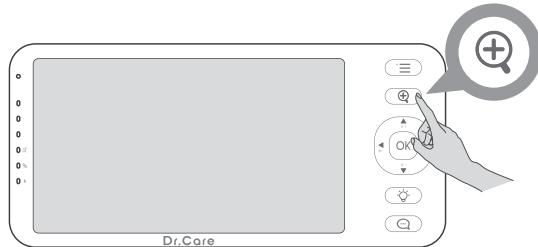


18. Night Vision

The night vision is automatically activated in a dim environment. Infrared LEDs attached on the front of the camera allow you to see the baby in a dark room.

19. Temperature Alert

 Press , select through  →  Temperature, press  /  to select °F/°C / Default value / High-temperature alarm / Low-temperature alarm → press  and press  /  to set.

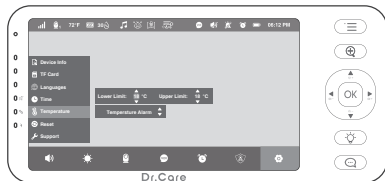

20. Other Settings

 
Press , and select  to enter other settings.

- 1)  Device Info View device information
- 2)  TF card Only FAT32 memory cards are supported
- 3)  Languages Select device language
- 4)  Time Set the time on the monitor manually or sync it with the phone's time
- 5)  Temperature Select temperature
- 6)  Reset Reset to factory settings
- 7)  Support View support contacts




21. Reset Hole

If the monitor screen does not respond when you press any buttons, you can use a pin to press the reset hole on the back of the monitor to restart it.

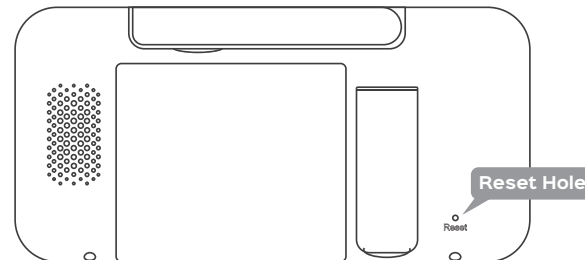

22. Battery Access

 Accessing the battery compartment for maintenance.

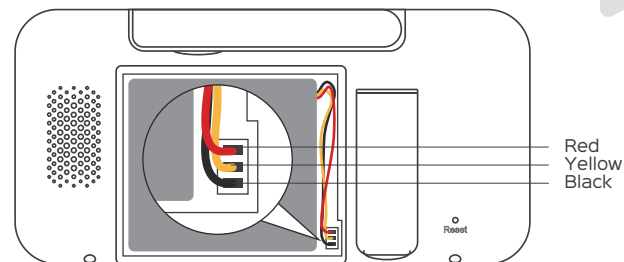



EVATOST CONSULTING LTD

**Office 101 32 Threadneedle Street, London,
United Kingdom, EC2R 8AY**

UK001711071667932gYSx **contact@evatost.com**

We simply act as UK representative for cross-border sellers, and are not manufacturers/importers/distributors for the product, nor involved in the manufacture/import/sale of the product. Therefore, we are not responsible for any after-sales services related to the product. In case of any product quality or infringement issues, the manufacturer/importer/seller shall be solely held responsible.



SUCCESS COURIER SL

**CALLE RIO TORMES NUM. 1, PLANTA 1, DERECHA,
OFICINA 3, Fuenlabrada, Madrid, 28947 Spain**

EU001711071668498Vbja **successservice2@hotmail.com**

We simply act as EU representative for cross-border sellers, and are not manufacturers/importers/distributors for the product, nor involved in the manufacture/import/sale of the product. Therefore, we are not responsible for any after-sales services related to the product. In case of any product quality or infringement issues, the manufacturer/importer/seller shall be solely held responsible.